# Drinking Water Discharge **MINIMUM** Required BMPs

Per State Water Resources Control Board, Order WQ 2014-0194-DWQ, General Order No. CAG140001

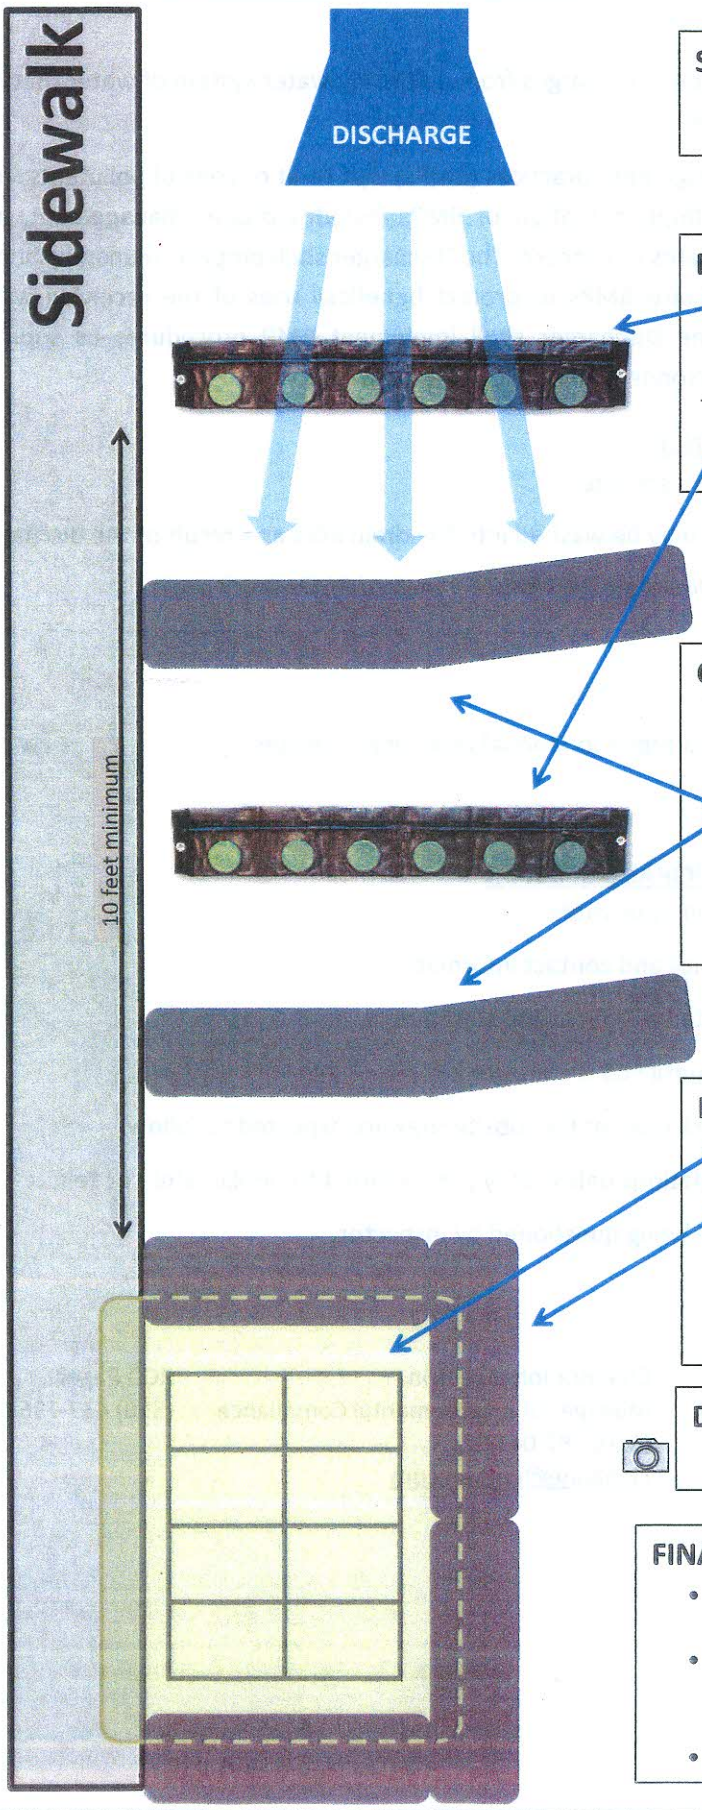


## SETUP

- This set up should be placed **at each flow path location**

## DECHLORINATE

- Put Dechlor strip across entire flow path
- No loose tablets!
- Replace tablets as needed
- Dechlor strips needed downstream **if flow is high**

## CONTROL SEDIMENT

- Slow the discharge with dams (1 or more gravel bags minimum per dam, more as needed)
- 2 dams **MINIMUM** (more dams as needed)
- Keep sediment buildup below curb
- Use additional gravel bags to direct flow through BMPs as needed

## PROTECT DRAIN INLET

- Use mesh fabric filter mat to cover DI
- Surround with gravel bags (use more as needed)
- Provide same protection at additional DIs downstream as needed

## DOCUMENT

- Take pictures to document the BMPs

## FINAL CLEAN UP

- Sweep, shovel into bucket, or use vacuum if available
- If wash down required due to public safety hazard, allow to drain **WITH BMPs IN PLACE**, then shovel again into bucket
- Remove BMPs only when job is complete